

ARMERA®

Installation Instructions

Vaere Floor standing Bath Shower Mixer

VA.134



Please Note


Please follow all instructions carefully. Failure to do so could invalidate your guarantee. As with the installation of any water bearing product, you must make sure that any laws prevalent to your area are followed. Such laws may include Local & National Water Supply Authority Regulations or Byelaws and Building and Plumbing Regulations. We recommend that a qualified registered plumber is used to install your product. Please ensure that when fitted, the product is easily accessed for service and maintenance requirements. ARMERA cannot be held liable for costs associated with accessing the product after it is fitted.

Before starting installation

These products are made from plated brass, so please take every care when handling them to avoid surface damage.

Please remove all packaging and make sure no components are missing. The following components should be present:

ITEM	DESCRIPTION
1	Spout
2	Body
3	Shroud
4	Fixing seat
5	Shower handset
6	Shower hose
7	Floor fixings x 3
8	Fixing bolts & washers x 8
9	Allen key

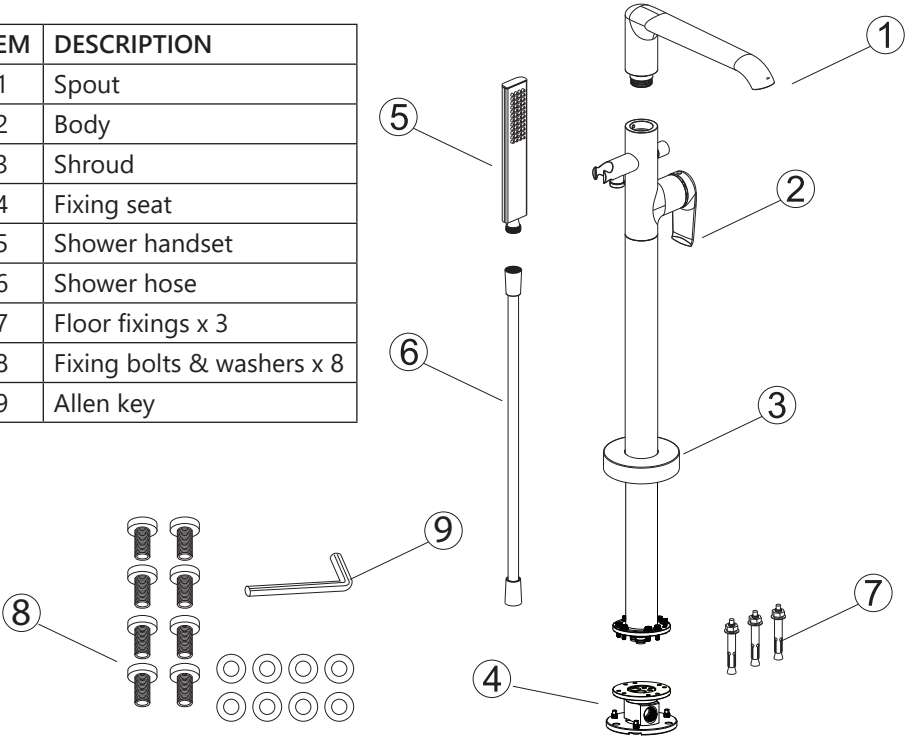


Before installation, please ensure that the plumbing system has been fully flushed to remove dirt and debris.


We recommend water inlet pressure of 1 to 5 bar.

Installation


1. This product requires adequately balanced hot and cold water supplies.
2. Turn off water supply.
3. The fixing seat must be recessed below floor level by at least 55mm

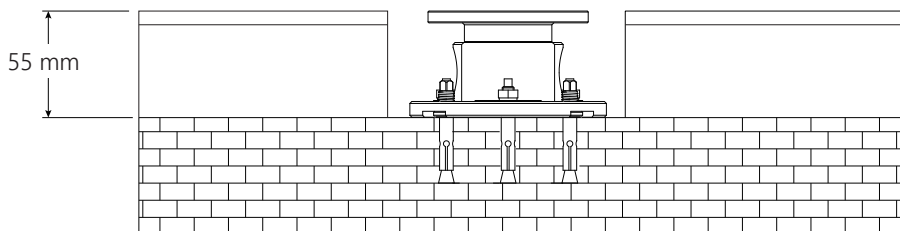


4. Place the fixing seat into the recess in the floor and mark the position of the fixing holes on the floor. Use suitable fixings for your floor type to locate the fixing seat in position. Do not yet fully tighten the fixing seat in position.
5. Use the levelling bolts to ensure that the fixing seat is perfectly level. Check using a spirit level.
6. Once you are satisfied that the fixing seat is level, firmly fix it in position.

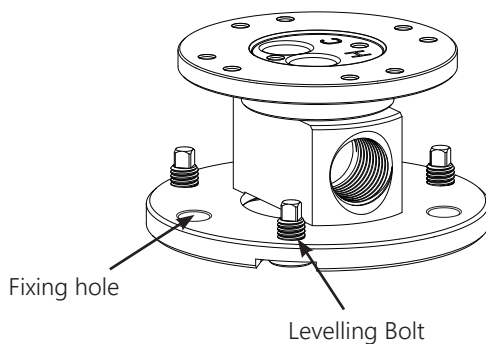



7. Connect the hot and cold water supplies to the fixing seat. Hot is marked with an "H" and cold with a "C".

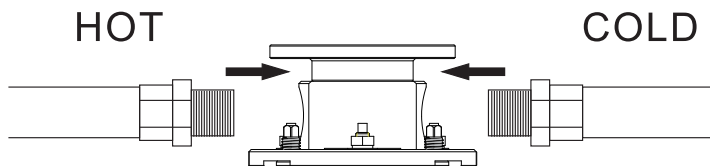


8. Turn on the water supply to check for leaks. When you are satisfied there is no leakage, shut off the water supply and remove the blanking cap from the fixing seat.

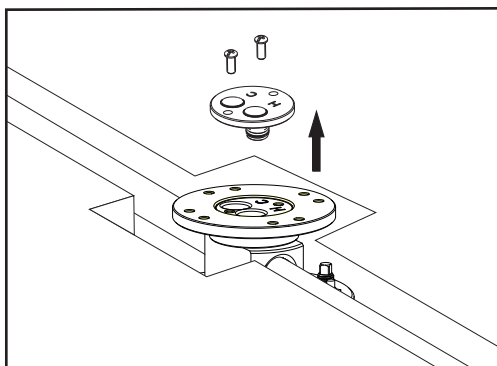


9. Push the inlet pipes that protrude from the base of the body into the hot and cold outlets on the fixing seat. Take care not to damage the rubber O-rings on the inlet pipes.
10. Rotate the body so that the spout will be facing the correct direction when it is attached, then secure the body to the fixing seat using the fixing bolts and washers. 8 bolts and washers are provided. For a firm fixing please use a minimum of 6 bolts.

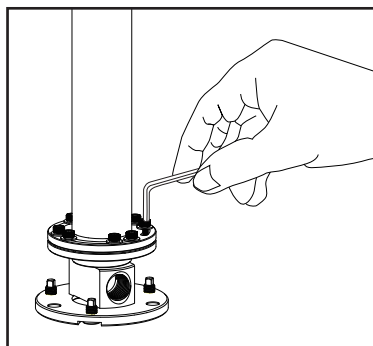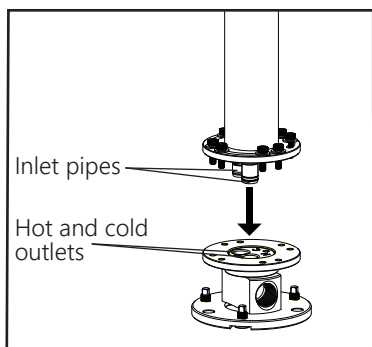

11. Taking care not to damage the rubber O-rings, push the spout into the body and secure in position by tightening the grub screw

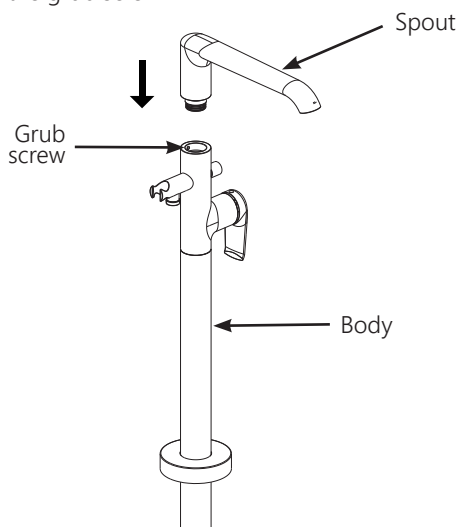


12. Connect the shower handset to the body using the shower hose and fit the shower handset into the shower bracket.

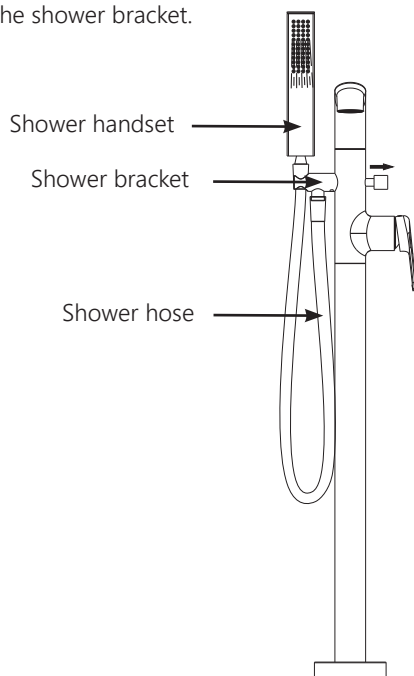


13. Turn on the water supply and check for leaks with the mixer in the on and off positions and water diverted to the spout and handset.

14. To operate and control the flow, lift the lever away from the body. Turn the lever left for hotter water and right for colder water.

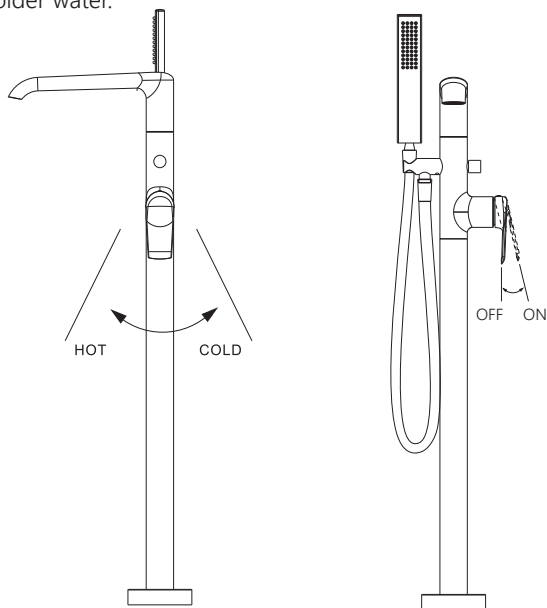

15. To operate the shower handset, turn on the water flow and pull the diverter knob away from the body. The diverter knob can be locked in position by rotating it clockwise by 90 degrees.

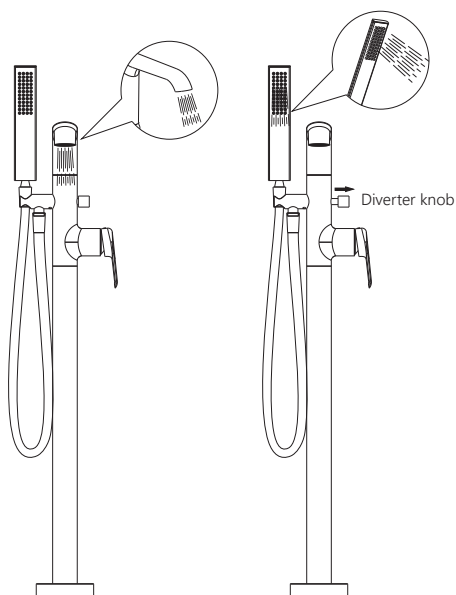

Contact Us

Should you need any assistance, please e-mail us at info@armera.co.uk or call 01225 251 204

Caring for your Armera product

We recommend only cleaning your product with a soft damp cloth. Please do not use any other cleaning products as they may damage the high quality finish of this product.

Guarantee

This ARMERA product is guaranteed against manufacturing defects. The cover period is from date of supply to the Armera customer and will last for 2 years for parts and labour. The parts guarantee can be extended to 15 years by registering your guarantee. To register your guarantee and review all guarantee conditions, please go to www.armera.co.uk

